

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## SSANGYONG VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Turismo</b>	5 seats / 5 door MPV
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.





**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



P  
R  
N  
D  
M+  
M-

### CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

215/65 R16  
 225/65 R16  
 225/65 R17

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Some vehicles are fitted with an electronic tyre pressure monitoring system.

Vehicles carry a full size spare wheel, but some models may carry a spacesaver spare which has limited travel distance and road speed when it is used.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 80.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Auto-locking on driving away. To lock all doors press the central locking switch on the centre console.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric slide sunroof, operated by roof mounted switchgear.
- Using child door locks?** Fitted to the edge of the rear passenger doors. To activate press the central locking button to lock all doors and tailgate. Ensure the doors are securely locked before use.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and foot operated parking brake is on. Place ignition key in starter switch on righthand side of steering wheel. Use a normal starting routine. Select desired gear. Release foot operated parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located on the rear nearside. Centrally locked. Use the key to unlock the fuel filler cap, and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Depress the catch under the bonnet to release it.
- Folding the rear seats?** The rear seats are divided into sections which can be separately folded. The second row of seats can be folded into captains tables. The second and third row of seats can be slid forwards/backwards. Unlock the seat catch before folding/sliding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** The full size spare tyre with tools and jack are located under a floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the foot operated parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the M+ or M- settings for manual selection of gears. Whenever the vehicle is at a standstill apply the foot operated parking brake. (Some models may also feature 4x4 wheel drive).