

INDEX - VICs (VEHICLE INSTRUCTION CARD)

LEVC VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	VN5 HYBRID	2 seats / 2 door / Small panel van / Hybrid

VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Windscreen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/60 R17

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol.

Fuel Tank Capacity: 36 litres

Plug-in PHEV Hybrid Electric. Single rear mounted electric motor drives rear wheels. 31 kWh lithium ion battery. 61 mile electric only range; hybrid range 304 miles.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** — Key / remote control operated central locking. Doors feature an auto lock mechanism.
- Anti-theft system?** — Passive arming of electronic engine immobiliser and alarm (if fitted). Visible VIN plate.
- Opening the load doors?** Centrally locked. Single nearside sliding door. Some models may feature an additional offside sliding door. Twin rear barn doors, split 60:40, opening 90 or 180 degrees.
- Adjusting door mirrors?** — Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** — Electric front and rear operated via control buttons on the driver's door (with individual control switches on each door).
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the brake pedal as you start the engine. Select desired gear. Release parking brake (parking brake will also normally auto release) and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. *Note: Petrol engine is used as a generator only for battery, it does not directly power the vehicle.*
- Electric charging ?** Hybrid electric motor supplements combustion engine usage, range and performance. Petrol engine is used as a generator only for battery, it does not directly power the vehicle. Electric driving range/performance depends on driving style. **TWIN CHARGING PORTS:** under left and right flaps adjacent to front grille, lightly press the edge of the desired flap to open - Type 2 socket for standard mains plug charging; Mode 3 DC high voltage socket. **CHARGING:** Turn off vehicle. 50kW DC charging recharges in 30 minutes; 7kW AC wall charging approximately 3 hours 45 minutes; 11kW AC charging 2 hours 20 minutes; 22kW AC charging 1 hour 15 minutes; 3.5kW domestic 3-pin charging in 8 hours. **REGENERATIVE BRAKING:** whenever the accelerator is not depressed whilst driving surplus energy may be fed back to the battery. **VEHICLE RANGE:** driving range displayed is only an estimation and is indicative only.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- Cargo area?** The load area has a flat floor. Steel bulkhead between passenger and load compartment. Four load retention rings fitted to cargo floor to secure loads. Cargo area has a two euro pallet capacity.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Using driving modes?** **GEAR SELECTION:** To change gears press the button on the shift lever and move the lever. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Whenever the vehicle is at a standstill apply the parking brake. **DRIVING MODES:** Selectable from the central touchscreen - *Save* - uses petrol range extender engine; *Urban* - electric only; *Smart* - hybrid electric and petrol.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-LEV-01 / 30-11-2021

LEVC VN5

HYBRID

2 SEATS
2 DOOR / SMALL PANEL VAN / HYBRID