

INDEX - VICs (VEHICLE INSTRUCTION CARD)

VOLVO VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	V40	5 seats / 5 door hatchback
4	V40 Cross Country	5 seats / 5 door hatchback / 4x4
5	XC40 HYBRID	5 seats / 5 door / SUV / 4x4 / Hybrid
6	V60	5 seats / 5 door estate
7	XC60 HYBRID	5 seats / 5 door / SUV / 4x4 / Hybrid
8	V90	5 seats / 5 door estate
9	XC90 HYBRID	5 seats / 5 door / SUV / 4x4 / Hybrid


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

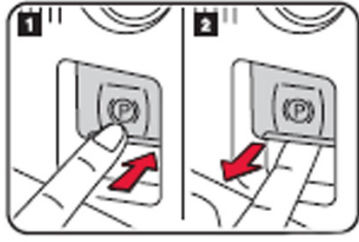

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.





RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine start / stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Starter Key Slot

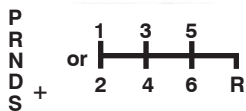

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 205/55 R16
- 225/45 R17
- 205/50 R17
- 225/45 R17
- 225/50 R17
- 225/40 R18
- 225/45 R18
- 235/35 R19
- 225/40 R19

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
62.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

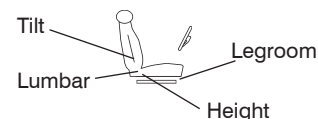

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Depress the door locking knobs to centrally lock the doors from the inside. Or depress the central locking switch. (Optional keyless entry system - pull handle to open, key must be in your pocket / handbag).
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an anti-theft alarm system. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Pull remote release handle. Use the key or remote control to remotely unlock / open / release
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door with individual control switches on each door.
- Operating the sunroof?** If fitted - electric tilt/glide glass panoramic sunroof with blind.
- Using child door locks?** Press the central locking switch on centre console. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Insert key into key slot on dashboard, and press engine start/stop button to start or stop the engine. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (brake pedal for automatics) as you start the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the handbrake.



VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine start / stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Starter Key Slot

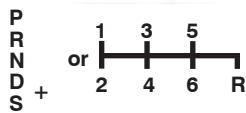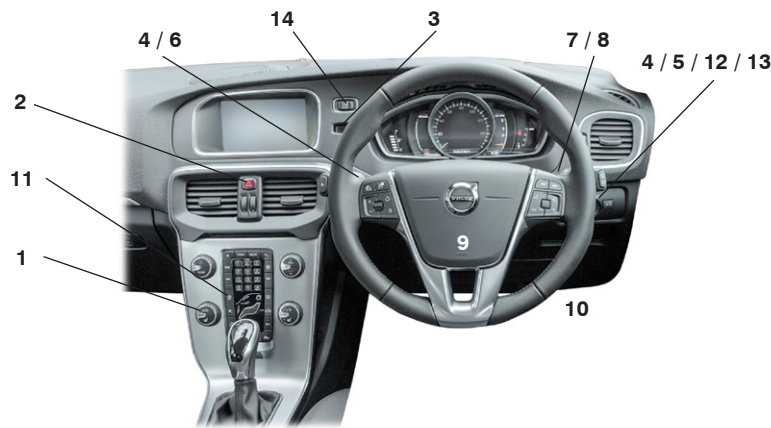

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
205/60 R16
205/50 R17
225/50 R17
225/45 R18
225/40 R18

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
62.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Depress the door locking knobs to centrally lock the doors from the inside. Or depress the central locking switch on the driver's door. (Optional keyless entry system - pull handle to open, to lock - press door button on the handle (key must be in your pocket / handbag)).
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an alarm system. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Pull remote release handle use the key or remote control to unlock / open. Remote release.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door with individual control switches on each door.
- Operating the sunroof?** If fitted - electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Press the central locking switch on centre console. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (brake pedal for automatics) as you start the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. The vehicle features a permanent AWD (4x4) drive system.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press edge of the flap to reveal the capless re-fuelling system.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VLV-02 / 30-09-2019

VOLVO V40 CROSS COUNTRY

**5 SEATS
5 DOOR ESTATE 4X4**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

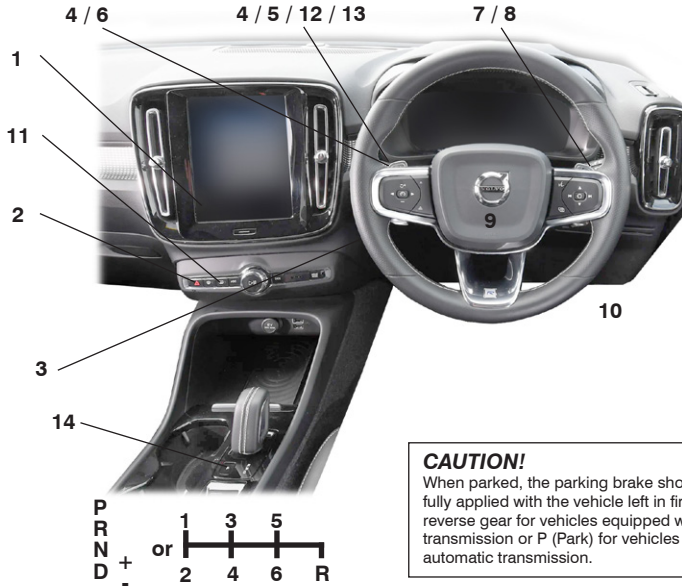

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

235/60 R17
235/55 R18
235/50 R19
245/45 R20

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap). Capacity varies on model.

Fuel Tank Capacity:
54 litres (AdBlue 14.5 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Depress the central locking button to lock the doors from the inside. Or depress the central locking switch on the driver's door. Doors feature an auto lock mechanism.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use remote release on the remote control key to unlock / open. Vehicles have a power tailgate - operated via the remote control, dashboard switch, or tailgate button. Some models feature remote opening, by retaining key in your pocket or bag and using a gentle foot movement below rear bumper sensors to open / close the tailgate. Flat folding load lashing rings are available to secure loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door (with individual control switches on each door).
- Operating the sunroof?** If fitted - electric tilt / slide panoramic sunroof, operated by roof mounted switches.
- Using child door locks?** Press the central locking switch on the driver's door. Or use electronic child locks activated by switch on driver's door. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (brake pedal for automatics) as you start the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Electronic remote release. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Or press remote release on the remote key.
- Electric charging ?** Hybrid electric motor supplements combustion engine usage, range and performance. Uses a self-charging battery powering front and/or rear electric motors. These batteries are high voltage. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold the rear seats?** The rear seats are divided into 60:40 split sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down (vehicles may be fitted with steering wheel mounted left and right paddle shift levers to manually change down or up). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VLV-03 / 19-06-2021

VOLVO XC40

HYBRID

5 SEATS
5 DOOR / SUV / 4X4 / HYBRID

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine start / stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

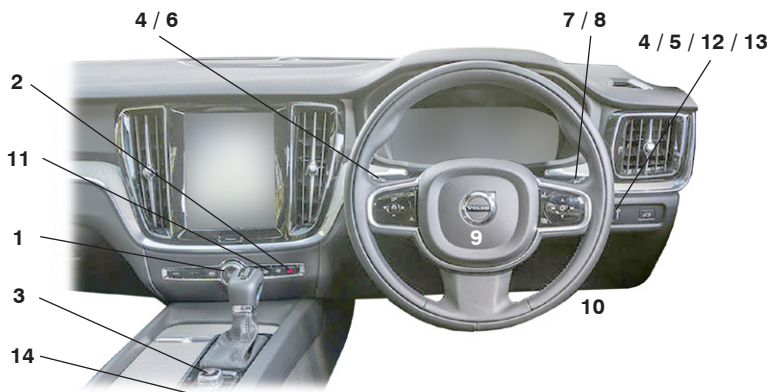

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 215/60 R16
- 225/50 R17
- 235/45 R18
- 235/40 R19

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres (AdBlue 11.5 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Depress the door locking knobs to centrally lock the doors from the inside. Or depress the central locking switch. For keyless entry models - just retain the key in your pocket or bag, and pull the handle to unlock and open.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an anti-theft alarm system. Visible VIN plate.
- Opening boot/tailgate?** — Centrally locked. Pull remote release handle. Use the key or remote control to remotely unlock / open / release.
- Adjusting door mirrors?** — Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** — Electric front and rear operated via control buttons on the driver's door with individual control switches on each door.
- Operating the sunroof?** — If fitted - fixed glass panoramic sunroof with powered sunshade operated by roof mounted switchgear.
- Using child door locks?** Press the central locking switch on centre console. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (or brake pedal for automatics) as you start the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release and engage.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. Some models feature electrically operated powered folding and unfolding via operation of centre console buttons. Other models require manual folding - to release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check the seats are securely locked into position before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VLV-04 / 20-08-2022

VOLVO V60

**5 SEATS
5 DOOR ESTATE**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 235/65 R17
- 235/60 R18
- 235/55 R19
- 255/45 R20
- 255/40 R21

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

Electronic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap). Capacity varies on model.

Fuel Tank Capacity:
70 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Depress the central locking button to lock the doors from the inside. Or depress the central locking switch on the driver's door. Doors feature an auto lock mechanism.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use remote release on the remote control key to unlock / open. Vehicles have a power tailgate - operated via the remote control, dashboard switch, or tailgate button. Flat folding load lashing rings are available to secure loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door (with individual control switches on each door).
- Operating the sunroof?** If fitted - electric tilt / slide panoramic sunroof with sunblind, operated by roof mounted switches.
- Using child door locks?** Press the central locking switch on centre console. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (brake pedal for automatics) as you start the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press edge of the flap to open and twist off the cap anticlockwise. Or press the remote release on the key or instrument panel.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- Electric charging ?** Hybrid electric motor supplements combustion engine usage, range and performance. Uses a self-charging battery powering front and/or rear electric motors. These batteries are high voltage. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- How to fold the rear seats?** The rear seat is divided into 60:40 split sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down (vehicles may be fitted with steering wheel mounted left and right paddle shift levers to manually change down or up). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VLV-05 / 19-06-2021

VOLVO XC60 **HYBRID**

5 SEATS
5 DOOR / SUV / 4X4 / HYBRID

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch / Start-Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



P
R
N
D+
D-

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/55 R17
245/45 R18
255/40 R19
255/35 R20

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

Vehicles are equipped with a temporary spare wheel. (Travel distance and speeds are limited when using this option).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 litres (AdBlue 11.5 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Depress the central locking switch on driver's door to lock the doors from the inside. Doors will automatically lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an alarm system. Visible VIN plate.
- Opening boot/tailgate?** — Centrally locked. Press remote switch to right of steering wheel or use the key or remote control to unlock / open. Press the dashboard remote release switch. Some models may feature powered / gesture control tailgate opening option.
- Adjusting door mirrors?** — Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** — Electric front and rear operated via control buttons on the driver's door with individual control switches on each door.
- Operating the sunroof?** — If fitted - electric tilt / slide panoramic sunroof operated by roof mounted switches.
- Using child door locks?** Press the central locking switch on driver's door. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (N or P for automatic) and electronic parking brake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (or brake pedal for automatics) as you start the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. The parking brake will also normally auto release and engage.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote release. Lightly press edge of the flap to pop it open and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

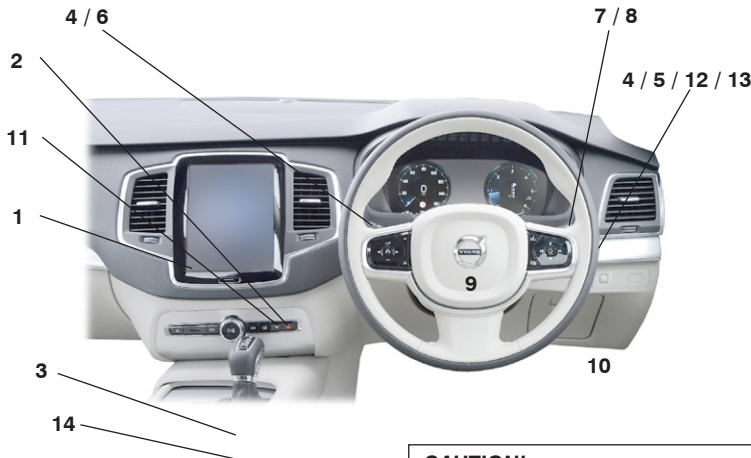

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 235/55 R19
- 275/45 R20
- 275/40 R21
- 275/35 R22

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap). Capacity varies on model.

Fuel Tank Capacity:
70 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Depress the central locking button to lock the doors from the inside. Or depress the central locking switch on the driver's door. Doors feature an auto lock mechanism.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use remote release on the remote control key to unlock / open. Vehicles have a power tailgate - operated via the remote control, dashboard switch, or tailgate button. Flat folding load lashing rings are available to secure loads. Electric internal adjustment operated via a control pad on the driver's door.
- Adjusting door mirrors?** Electric front and rear operated via control buttons on the driver's door (with individual control switches on each door).
- Opening the windows?** If fitted - electric tilt / slide panoramic sunroof with sunblind, operated by roof mounted switches.
- Operating the sunroof?**
- Using child door locks?** Press the central locking switch on centre console. Or use mechanical child locks activated by turning the knob on edge on edge of the rear doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. For keyless starting, retain the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Fully depress the clutch pedal (brake pedal for automatics) as you start the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open and twist off the cap anticlockwise. Or press remote release on the dashboard.
- Electric charging ?** Hybrid electric motor supplements combustion engine usage, range and performance. Uses a self-charging battery powering front and/or rear electric motors. These batteries are high voltage. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- How to fold the rear seats?** The rear seats are divided into 60:40 split sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down (vehicles may be fitted with steering wheel mounted left and right paddle shift levers to manually change down or up). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VLV-07 / 19-06-2021

VOLVO XC90

HYBRID

5 SEATS
5 DOOR / SUV / 4X4 / HYBRID