

INDEX - VICs (VEHICLE INSTRUCTION CARD)

GWM ORA VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	ORA Funky Cat ELECTRIC	5 seats / 5 door / Electric


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

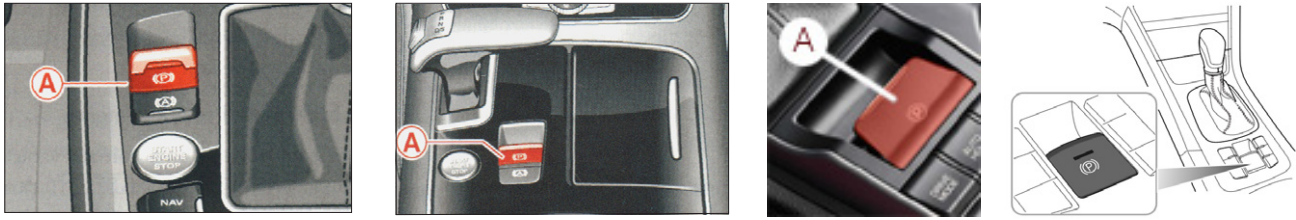

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Rotary Gear Selector
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar.

205/55 R17
 215/50 R18

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

- Electric vehicle powered by a Lithium ion battery
- Fitted with either lithium ion phosphate 48kWh or Ternary lithium 63kWh
- Electric motor located at front
- Front wheel drive

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

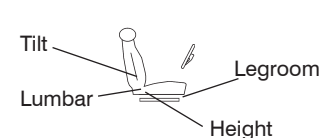

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

— Key / remote control operated central high security dead locking. Keyless entry - just retain key in your bag or pocket. Touch the sensor on the back edge of drivers door handle to unlock. To lock, touch the sensor on front of handle. (NOTE: the wearing of gloves may prevent this functionality working). Use the driver's door central locking switches to unlock/lock from inside the vehicle.

All doors will auto-lock on vehicle motion.

Anti-theft system?

— Remote anti-theft alarm. Passive arming of electronic engine immobiliser on locking the vehicle.

Opening boot/tailgate?

— Centrally locked. Keyless unlocking. Press the remote release button at lower right of dashboard to release. Or use the remote key to remotely open the tailgate. Some vehicles may feature keyless hands-free opening operated via foot gesture activation of sensors under the rear bumper.

Adjusting door mirrors?

— Electric adjustment operated by the control pad on the lower right of the dashboard.

Opening the windows?

— Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

— If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.

Using child door locks?

— Located on the edge of the rear doors. Open door and slide the child lock switch to activate. Close door and check from inside that the door is securely locked.

Starting the engine?

— Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Retain the key in your pocket or bag. Unlock the vehicle. Sit on driver's seat. Fasten seatbelt. Fully close the driver's door. Depress the brake pedal. Select D gear, or shift into R gear to reverse. Use the rotary gear selector to select gears (P, R, N and D). Vehicles feature automatic electronic motor start/stop technology - whereby the electronic motor automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - motor instantly restarts on depression of the accelerator. Parking brake will normally auto release. Gently press the accelerator to move the vehicle.

Electric charging ?

— **RANGE:** Driving range between 192 (48kWh battery) and 260 miles (63kWh battery). **BATTERIES:** Fitted with either: 48kWh battery; or 63kWh battery. **CHARGE PORT:** Charging flap located on front nearside under a flap. Lightly press the edge of the flap to open. To reveal a standard charging port (AC charging) and fast charging port (DC charging). Remove the dust covers before attaching cables. **CHARGING:** Recharge time is 48 minutes max to charge to 80%. AC CHARGING time (11kw, 0-100%): 5.5 h (48kWh battery) or 6.5 h (63kWh battery). DC CHARGING time (15-80%): 42.5min (48kWh battery) or 48min (63kWh battery). DC CHARGING time (20-80%): 38.5min (48kWh battery) or 46min (63kWh battery). For 48KWH BATTERY: Home 6.6kW single-phase AC charger: 5.4hrs mins (charge 15 - 80%); Public 11kW three phase AC charger: 3.25 hrs (charge 15 - 80%); Rapid 100kW DC charger using CCS socket: 42.5 mins with max 64kW charging (charge 15 - 80%). **IMPORTANT:** Maximum charging rates and charging times will vary on vehicle and climatic conditions. **OPTIMISE CHARGING:** Charge the electric car battery between 20%-80% to preserve the lifespan of the battery pack. Avoid overcharging. Reduce exposure to extreme temperatures (cold or heat) which adversely affect battery and travel range. **ADDITIONAL:** wireless smartphone charging.

Releasing the bonnet?

— Pull bonnet release lever located in front footwell. Unhook catch under bonnet.

Folding the rear seats?

— The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock.

How to change a tyre?

— Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

— Use the rotary gear selector to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing. For normal driving select D where the transmission will use all available forward gears automatically. Use the driving mode switch located at lower right of dashboard to select AUTO, ECO, ECO+, NORMAL, SPORT driving modes to match your driving needs. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-GWM ORA-01 / 10-03-2023

ORA FUNKY CAT

ELECTRIC

5 SEATS
 5 DOOR HATCHBACK / ELECTRIC