

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## DACIA VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Duster</b>	5 seats / 5 door 2x4 or 4x4
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

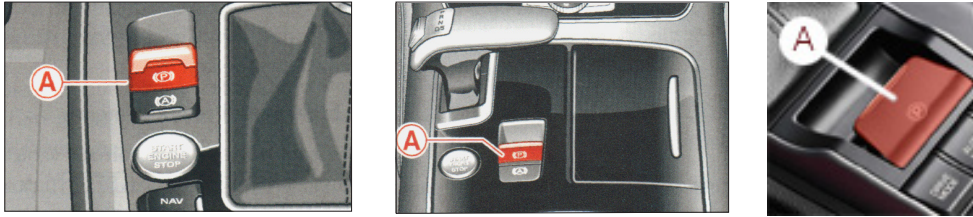

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.





**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

 
Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

215/65 R16

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles may be supplied with either a tyre repair kit in lieu of a spare wheel, or a spacesaver spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 50.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the drivers door, or manual internal adjustment via control knobs on both front doors.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated. Or press the centre console central locking switch.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, foot pedals are not depressed and the vehicle is motionless - just depress the clutch to instantly restart. Some models may also feature 4WD with selectable modes.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** **Note:** This vehicle is not usually supplied with a conventional spare wheel and tyre, but a tyre repair kit may be supplied. In the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 16 95 875 for assistance.
- To repair the wheel using the repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit or contact us for assistance.