

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## MAZDA VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
7	<b>CX-3</b>	5 seats / 5 door / SUV
8	<b>CX-5</b>	5 seats / 5 door / SUV
9	<b>6</b>	5 seats / 5 door / hatchback / estate

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Drive Mode Selector

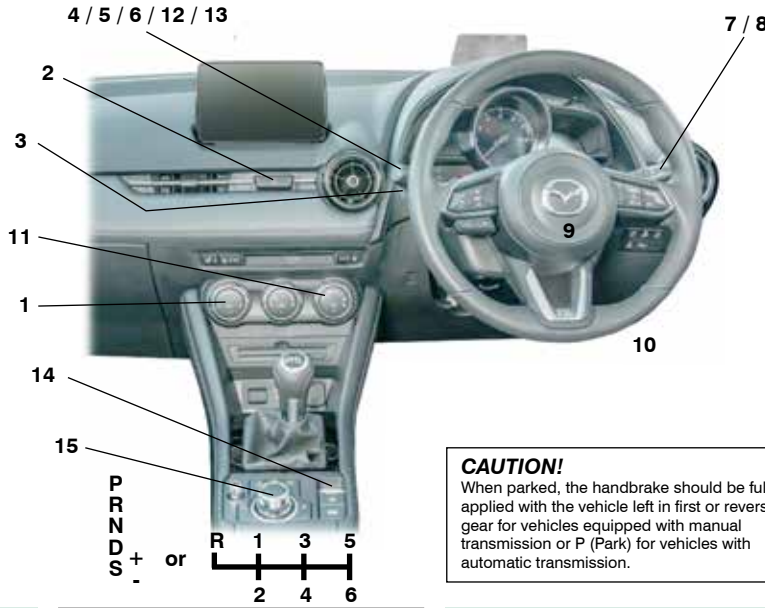

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

215/60 R16  
215/50 R18

Vehicles are fitted with an automatic tyre pressure warning system.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles.

Fuel Tank Capacity:  
48 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

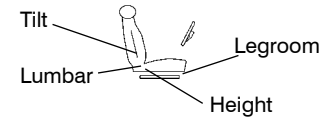

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside. Some models feature keyless entry - just retain the key in your pocket or bag to auto unlock when in close proximity to the vehicle.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some vehicles feature a powered opening tailgate. The load area features a flexible cargo board.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with an electric panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Models feature a keyless entry and start - just carry the smart key in your pocket or bag - and press the engine start/stop to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed. The parking brake will normally auto engage and release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **The vehicle is not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to use 4WD system?** Use the rotary selector dial adjacent to the gear shift lever to select different modes for offroad and driving conditions.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the S+ or S- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the parking brake.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Drive Mode Selector

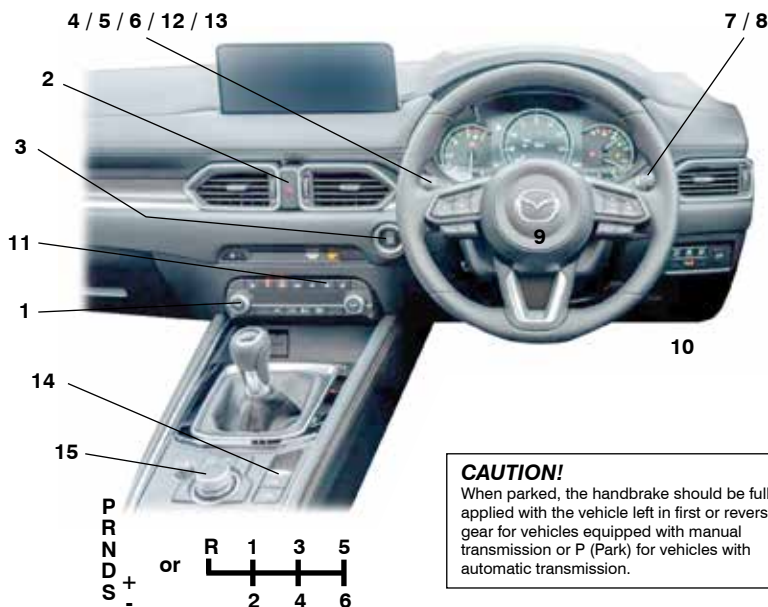

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R17
- R19

Vehicles are fitted with an automatic tyre pressure warning system.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles.

Fuel Tank Capacity:  
56 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside. Some models feature keyless entry - just retain the key in your pocket or bag to auto unlock when in close proximity to the vehicle.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some vehicles feature a powered opening tailgate. The load area features a flexible cargo board.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with an electric panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Models feature a keyless entry and start - just carry the smart key in your pocket or bag - and press the engine start/stop to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed. The parking brake will normally auto engage and release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:20:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **The vehicle is not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the S+ or S- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the parking brake.
- How to use 4WD system?** Use the rotary selector dial adjacent to the gear shift lever to select different modes for offroad and driving conditions.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MAZ-02 / 20-08-2022

# MAZDA CX-5

**5 SEATS  
5 DOOR SUV / 2WD OR 4WD**




# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

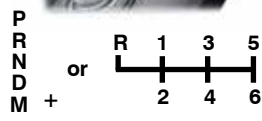

### CAUTION!

When parked the electric parking brake (located at lower left of instrument panel) should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Fitted tyres include:  
R17  
R19

On those vehicles fitted with spacesaver spare wheels - note that driving speed and travel distance is restricted.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
62 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

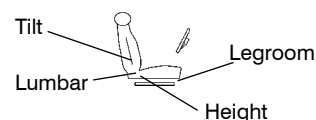

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Depress the central door locking switch located on the instrument panel to lock the doors from the inside. Auto door locking.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models are fitted with a remote release button located on the lower right of the instrument panel.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the lever down to activate, or use the central locking button to lock all doors from the inside. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. For keyless starting, just keep the key in your pocket or bag and press the engine start/stop to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed. The parking brake will normally auto engage and release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a tyre repair kit or spare wheel. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Use the shift lever to select gears. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MAZ-03 / 20-08-2022

# MAZDA 6

**5 SEATS / 5 DOOR /  
HATCHBACK / ESTATE**